

# Internet Keyboard

OWNER'S MANUAL — Please read before using this equipment.

Your Compaq Internet Keyboard is designed to provide you with one-touch access to the Internet and your favorite web sites, e-mail, and programs. The keyboard's 18 programmable hot keys let you easily program it for easy one-touch access to the Internet, web sites you visit often, and your favorite applications. You can even use the keyboard to control your computer's CD or DVD audio!

**One-Touch Multimedia Function Keys** — let you use the keyboard to easily operate your CD or DVD's mute, volume, track, stop, play, record, and rewind controls.

**One-Touch Application Keys** — let you easily launch applications such as windows switching, calculator, screen saver, Internet functions, and your favorite programs by pressing a single button.

**True-Curve Streamlined Design** — provides maximum comfort for everyday use.

**Detachable Palm Rest** — supports your forearms and can be removed when desk space is limited.

**Mode Indicators** — make it easy to see when Num Lock, Caps Lock, Scroll Lock, and screen saver functions are in use.

**Touch Manager Software** — makes it easy to program and use the keyboard's hot keys.

## SYSTEM REQUIREMENTS

You can connect the keyboard to any IBM® PC with a PS/2-compatible keyboard port, running Windows 95, Windows 98, Windows ME, Windows 2000, Windows XP, Windows NT 4.0, or with Novell networking. To use all of the keyboard's features, your PC also needs:

- 16-bit sound card (for CD and audio operation)
- CD-ROM (for CD and video operation) or DVD-ROM (for DVD operation)
- MPEG card or pre-installed MPEG software (for video operation)

## THE FCC WANTS YOU TO KNOW

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## SUPPLIED ACCESSORIES

Make sure you have the Touch Manager software CD and detachable palm rest before disposing of the packing material.

## CONNECTING THE KEYBOARD

1. Turn off your computer.
2. Connect the keyboard's plug to your computer's PS/2 connector.

**Note:** If your computer has a 5-pin AT keyboard port instead of a PS/2 connector, use a 5-to-6-pin adapter (available at your local RadioShack store) to connect the keyboard to the computer.

3. Turn on your computer.

 


© 2002 RadioShack Corporation. All Rights Reserved.  
Compaq is registered with by the U.S. Patent and Trademark Office.  
RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

## INSTALLING SOFTWARE


Your keyboard includes a Touch Manager software CD. Although you can use many of the keyboard's features right away, you must install this software before you can program and use the hot keys on the upper right side of the keyboard.

1. Run Windows on your computer.
2. Insert the supplied Touch Manager software CD into your CD-ROM drive. The following dialog box appears.

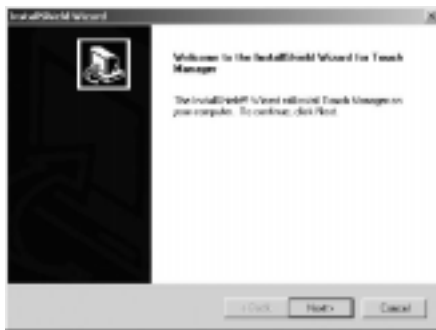

**Note:** If your computer's operating system does not automatically install the software, select **Run** from the *Start* menu, type **D:\SETUP** (or the drive letter for the CD-ROM drive you are using followed by a colon) in the *Run* window, then press **Enter**.

 3. Click **Next**. A dialog box appears with installation instructions. Follow the on-screen instructions to install the software. The software is copied onto your computer's hard disk. The following dialog box appears.

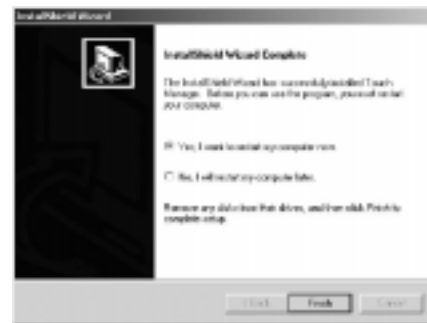


4. Click **Finish**, then reboot your computer to finish installing the software. The keyboard is ready to use. The Touch Manager icon appears on the lower right side of the window, ready for you to use to set up the keyboard's hot key functions.

## CONFIGURING THE KEYBOARD'S HOT KEYS

You can program the hot keys on the upper right side of your keyboard so your computer performs functions you select when you press a single key. This lets you assign functions such as accessing the World Wide Web or starting your e-mail program to individual keys.

**Note:** The steps in the following sections show just one example of how to program a hot key. Procedures might vary according to your operating system and the programs you have installed.

When you install the supplied Touch Manager software, it assigns the following functions to the hot keys by default.

Keyboard Symbol	Touch Manager Panel Label	Function
	<b>SSaver</b>	Controls the screen saver.
<b>Internet</b>	<b>WWW</b>	Accesses the World Wide Web.



2. On the panel, click the hot key you want to program. The *Configure Button* dialog box appears.



3. Click **Functions** if necessary, then press ▼ and scroll through the following functions.

<i>Calculator</i>	<i>Calculator Clear</i>
<i>Calculator Transfer</i>	<i>Close</i>
<i>DOS</i>	<i>Eject/Load</i>
<i>Email</i>	<i>Internet News</i>
<i>Media</i>	<i>Mute</i>
<i>My Computer</i>	<i>My Document</i>
<i>Next Track</i>	<i>None</i>
<i>Phone Dialer</i>	<i>Play/Pause</i>
<i>Previous Track</i>	<i>Record</i>
<i>Rewind</i>	<i>Rotate (Windows)</i>
<i>Screen Saver</i>	<i>Stop</i>
<i>Volume Down</i>	<i>Volume Up</i>
<i>WWW</i>	<i>WWW Backward</i>
<i>WWW Favorites</i>	<i>WWW Forward</i>
<i>WWW Home</i>	<i>WWW Refresh</i>
<i>WWW Search</i>	<i>WWW Stop</i>

 
4. Click on the function you want to assign to the hot key, then click **OK**. The desired application name replaces the original hot key's function name on the hot key panel. You can press that hot key on the key-


board to access the function you assigned to it.


## Assigning a Program

You can use the supplied Touch Manager software to preprogram the keyboard's hot keys with the keystrokes you need to access programs such as Microsoft Word, Excel, and Powerpoint. Then simply press the hot key to access the function.

### Notes:

- You must have a program installed on your computer before you can assign a hot key to it.
- You cannot program the , **Mute**, or **Volume** hot keys to access a program.

 1. Left-click  on the lower right of the window. The *Touch Manager* hot key panel appears.
2. Click the hot key you want to use for the program. The *Configure Button* dialog box appears.
3. Click **Launch Application or Website** then click **Browse**. The *Select Action* dialog box appears.

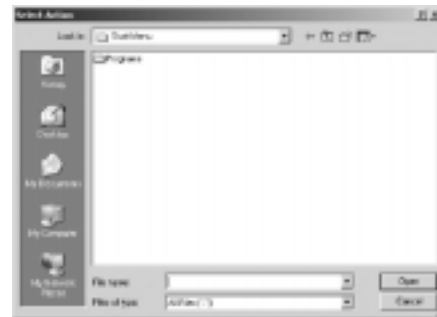

4. Click ▼, select **C:\**, select the subdirectory containing the program you want, click the desired program folder to display the program in the **Programs** file, then double-click the program to select it.

4. Click **OK**. **Favori** replaces **WWW** on the *Touch Manager* hot key panel.

- Click **Favori** on the hot key panel. *WWW Favorites* appears in the *Configure Button* dialog box.

6. Click **Launch Application or Website**, type the URL for the web site you want to access under **Application Path or URL**, then click in the box next to **Button Label**.



7. Type the label you want to appear above the hot key for the web site you typed below, then click **OK**. The name you typed replaces the original hot key's function name on the hot key panel. You can press that hot key on the keyboard to access the web site you assigned to it.

**Configure Button**

Button Label:

☒ Functions

☐ Launch Application or Website

Application Path or URL:

## USING THE DETACHABLE PALM REST

To attach the palm rest to the keyboard, turn over the keyboard and palm rest. Align both locking tabs on the front of the palm rest with the matching slots on the keyboard, then press the palm rest into the slots. To detach the palm rest, gently pull it away from the keyboard.

## CARE

Keep the keyboard dry; if it gets wet, wipe it dry immediately. Use and store the keyboard only in normal temperature environments. Handle the keyboard carefully; do not drop it. Keep the keyboard away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the keyboard's internal components can cause a malfunction and might invalidate its warranty. If your keyboard is not performing as it should, take it to your local RadioShack store for assistance.

### Limited Two-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for two (2) years from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99